


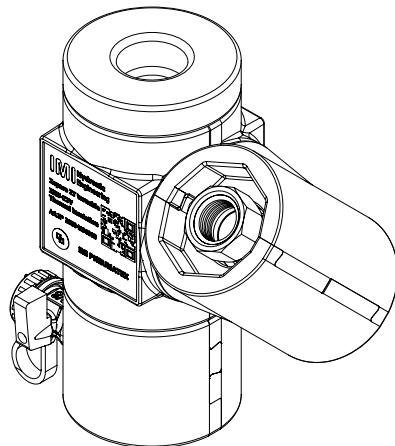
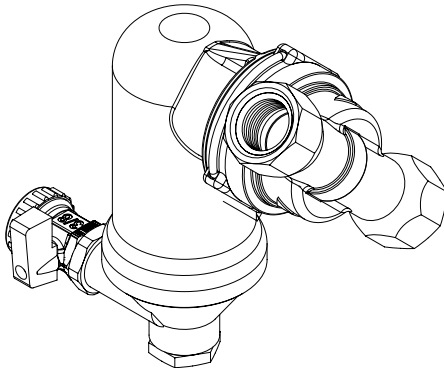
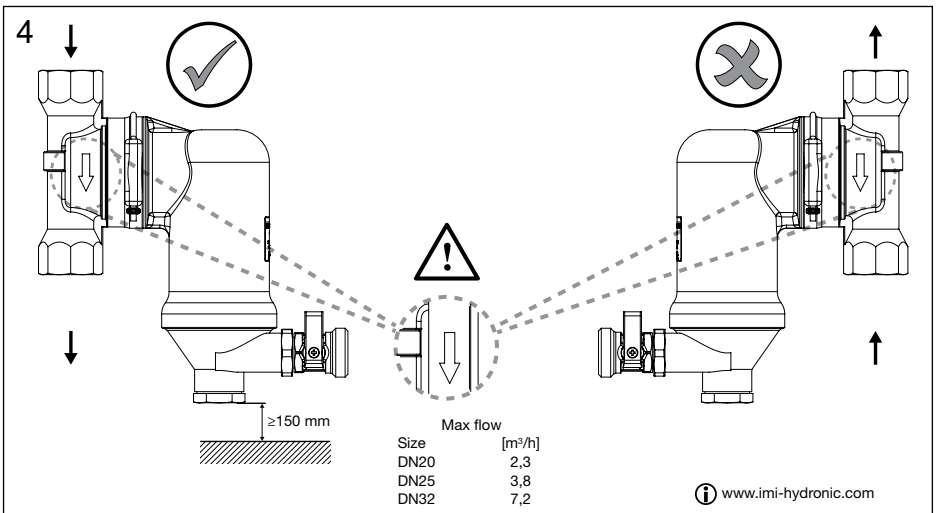
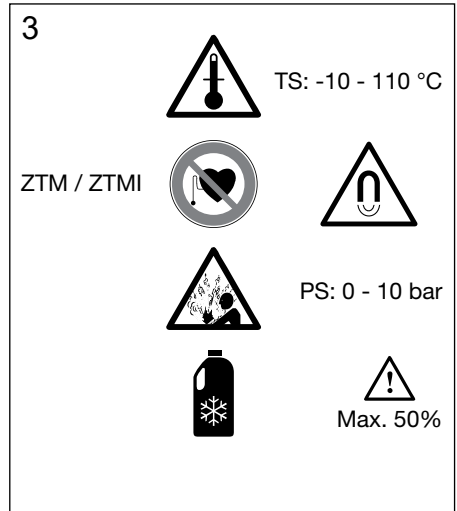


Zeparo ZTD / ZTM / ZTMI / ZHU-ZTD(M) INSTALL

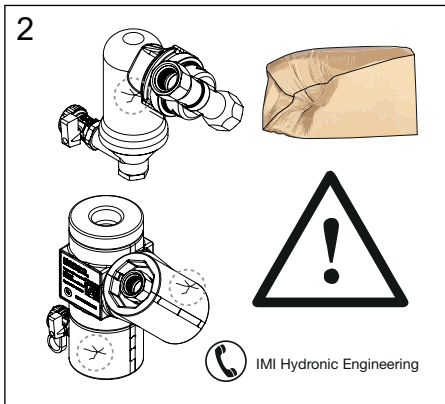


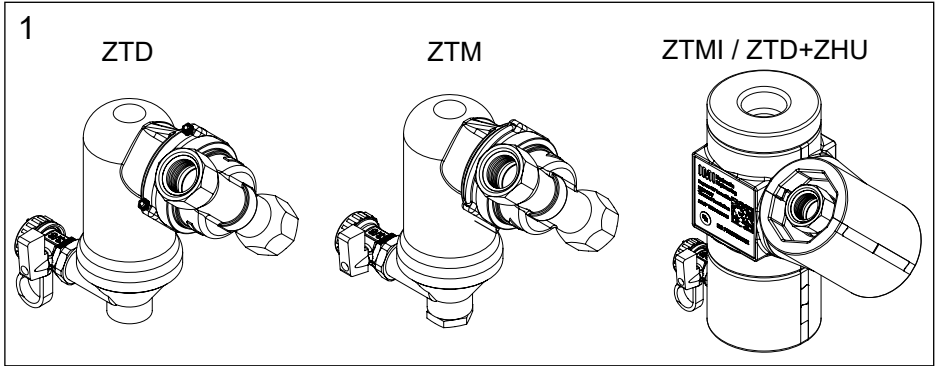


5

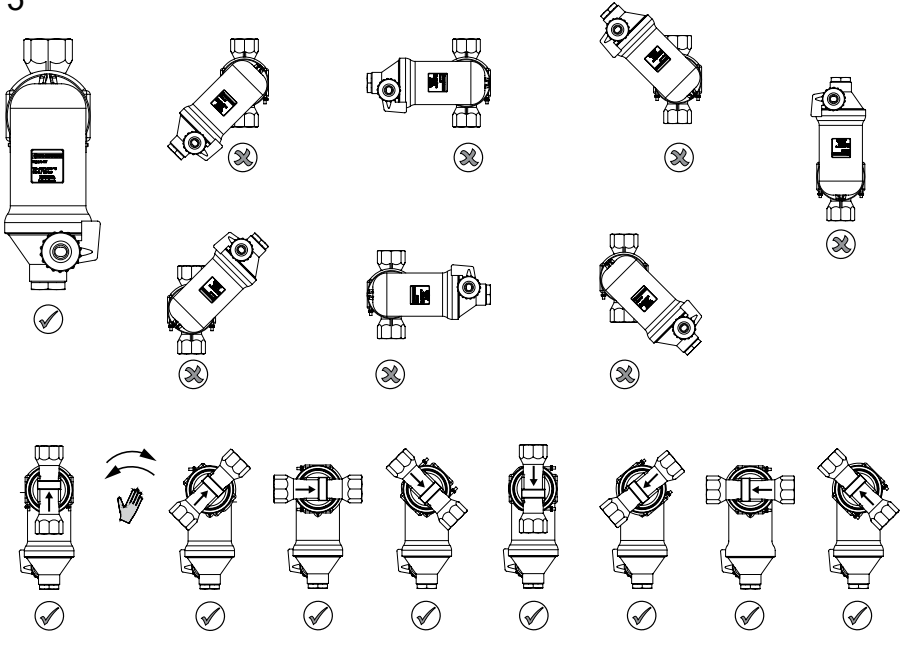


6

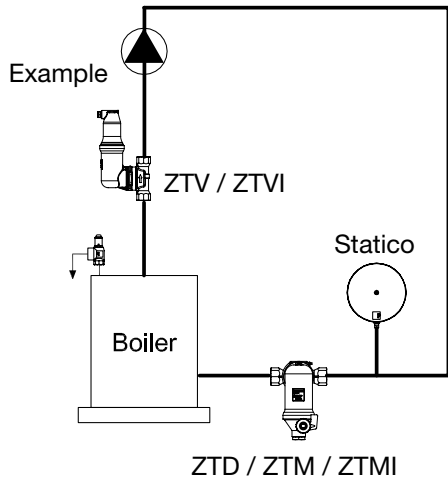




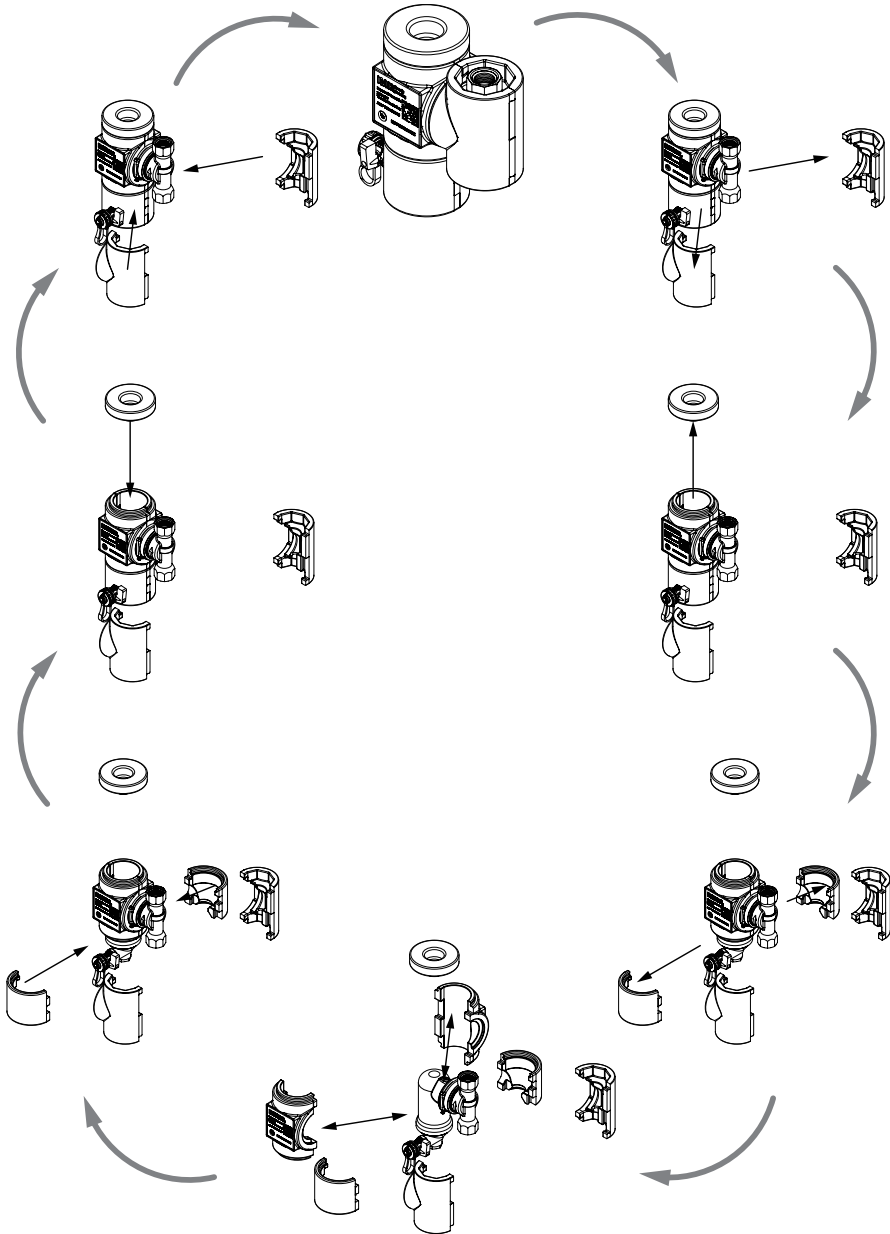


8


①

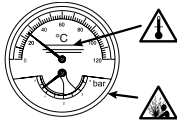


②

 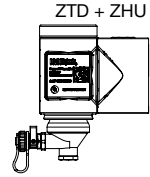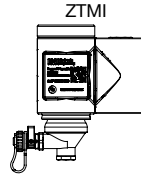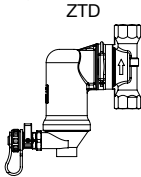


③

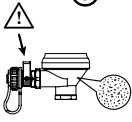


④

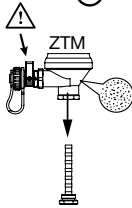


⑤

 


⑥

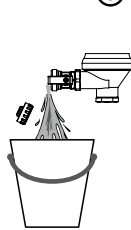


⑦

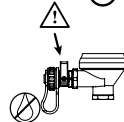


⑧

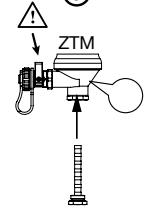


⑨

 

⑩

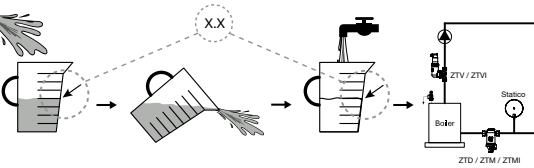


9

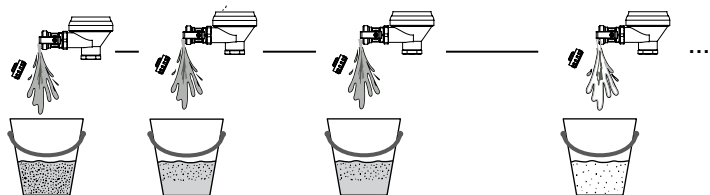


10



 
every
5 years



shut off

 

< 50 °C

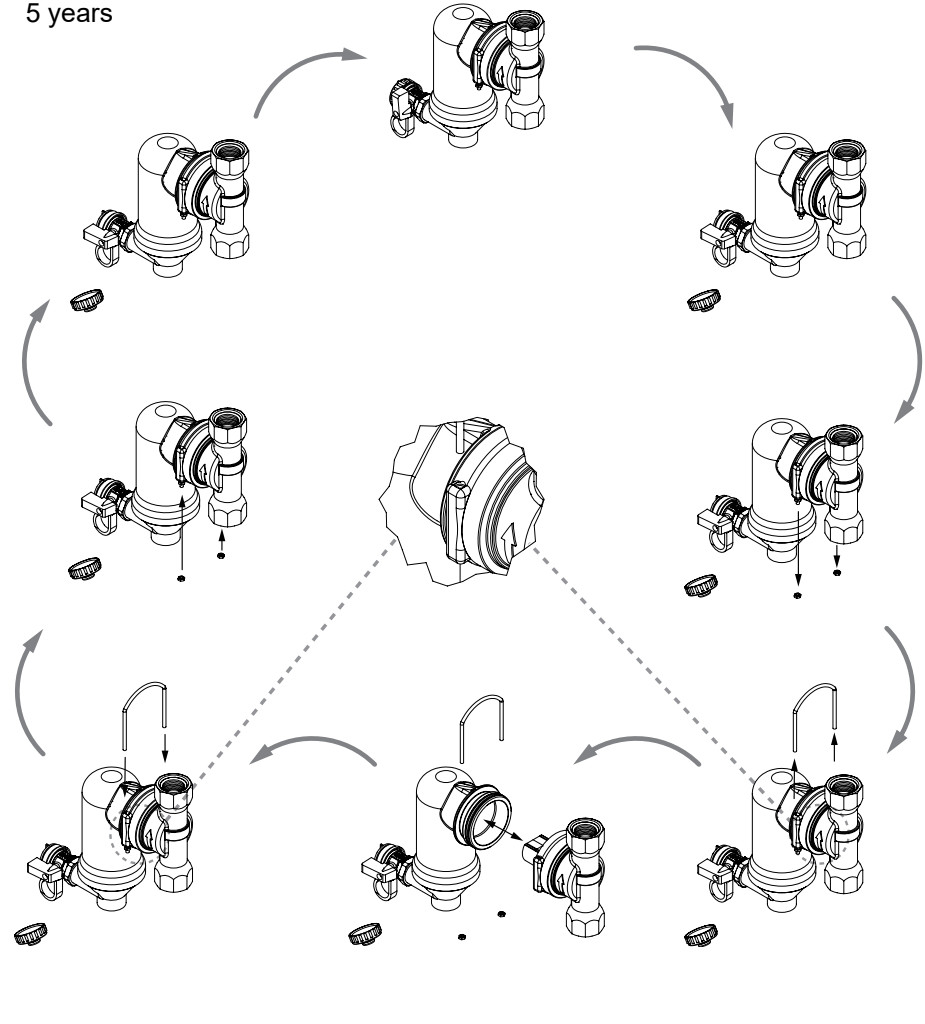

① www.imi-hydronic.com